

2009 ACCESSORIES AND EQUIPMENT

Wiring Harness - Service Information - Journey

GROMMET

REMOVAL

GROMMET - A PILLAR

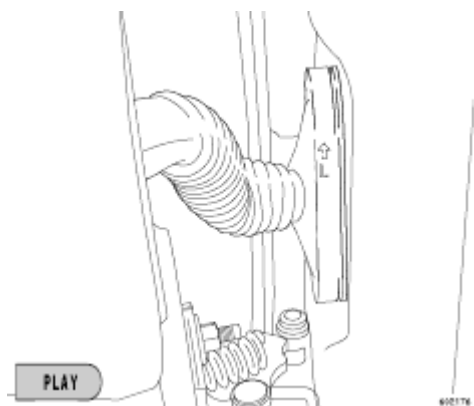


Fig. 1: A Pillar Grommet

Courtesy of CHRYSLER LLC

1. Peel the A Pillar grommet (1) off of the connector/retainer and move it up the wire harness.
2. Grasp the wire harness (2) by the convolute section of the grommet and gently pull the wire harness down towards the floor to expose the connector lock tabs.


CAUTION: Do not force the locking tab past the connector body, as damage to the connector may occur.

3. While still pulling down on the harness, use a small slotted screw driver (3) to **gently** push one of the top lock tabs until the lock feature is flush with the connector/retainer body.
4. Repeat the step 3 for the remaining top lock tab.
5. The connector should now be able to rock out of the sheet metal hole without causing any damage to the connector or sheet metal.

TRAILER TOW

STANDARD PROCEDURE


TRAILER TOW HARNESS INSTALLATION

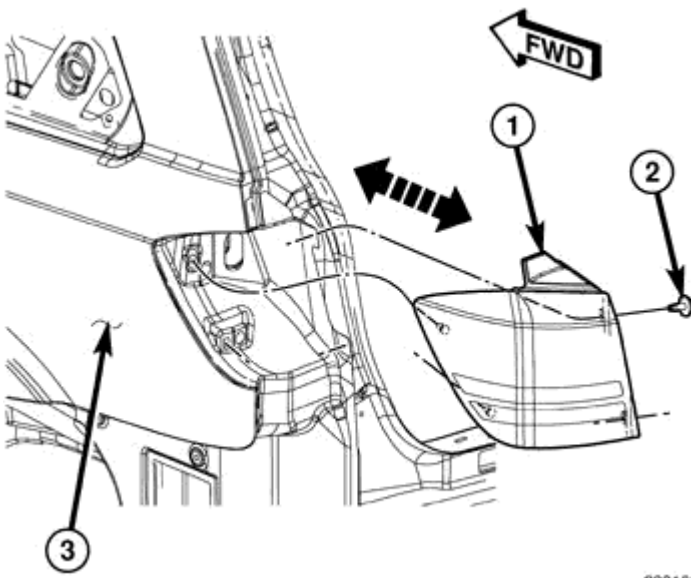

893102

Fig. 2: Push Pin Fasteners & Rear Tail Lamp Assemblies
Courtesy of CHRYSLER LLC

1. Remove the push pin fasteners (2) and separate the rear tail lamp assemblies (1).

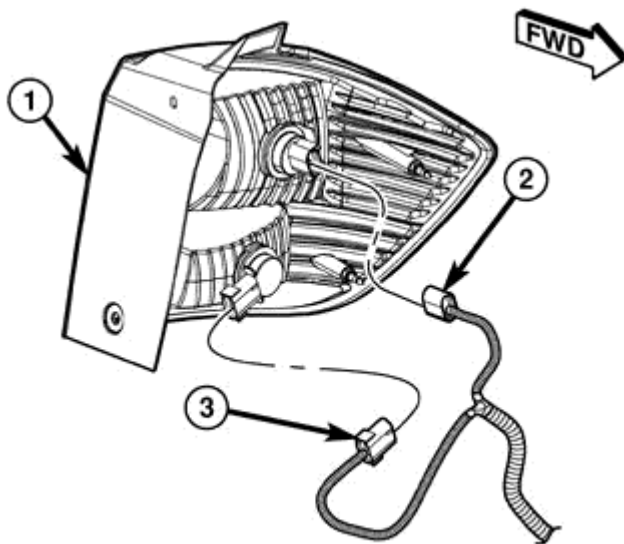

893122

Fig. 3: Tail Lamp Electrical Connectors & Tail Lamp Assemblies
Courtesy of CHRYSLER LLC

2. Disconnect the tail lamp electrical connectors (2 and 3).

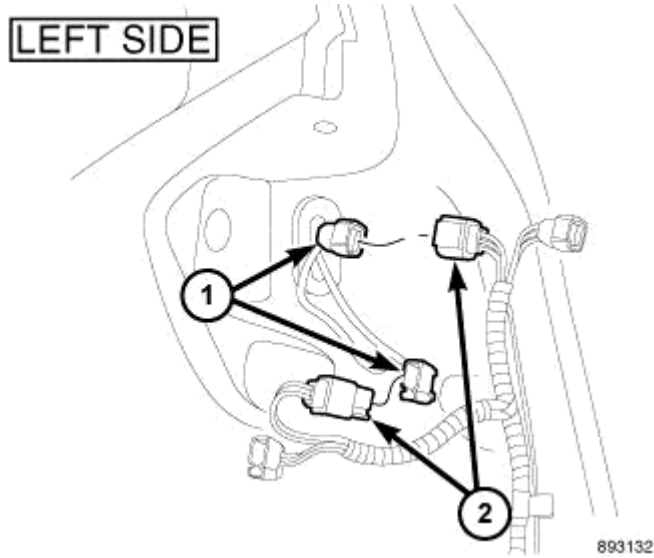


Fig. 4: Tail Lamp Electrical Connectors
Courtesy of CHRYSLER LLC

3. Connect the harness (2) to the left side tail lamp electrical connectors (1).


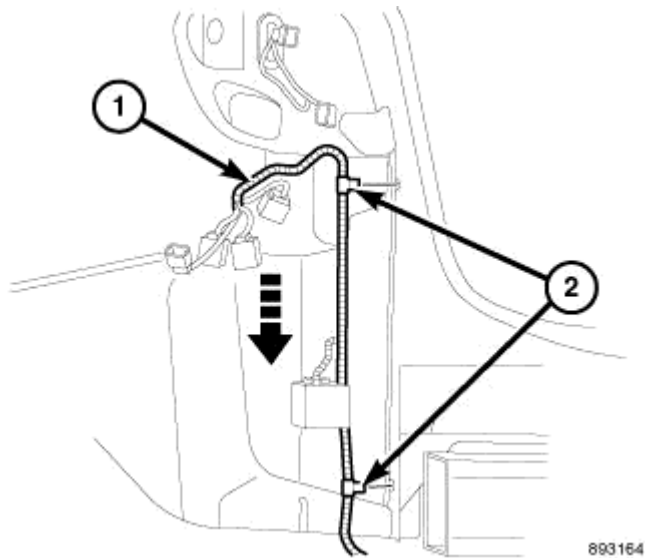


Fig. 5: Harness & Support Clips
Courtesy of CHRYSLER LLC


4. Position the harness (1) through the tail lamp opening and down the side of the fender.
5. Secure the support clips (2) to the body seem.

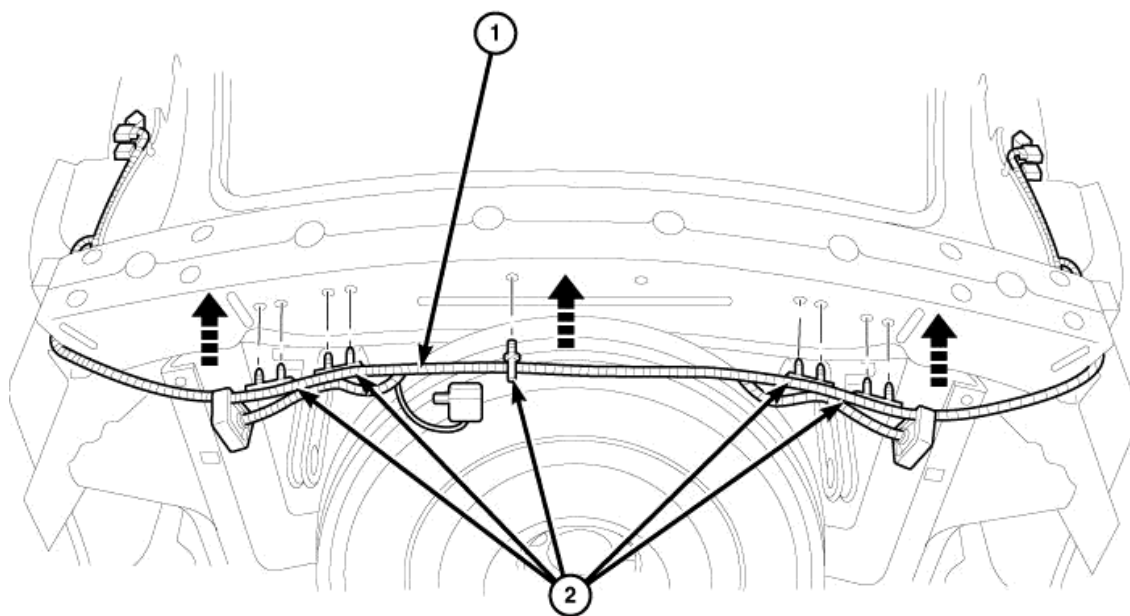

893194

Fig. 6: Harness & Push Pin Fasteners
Courtesy of CHRYSLER LLC

6. Position the harness (1) over the exhaust and fasten the push pin fasteners (2) to the under side of the rear bumper in the existing holes.

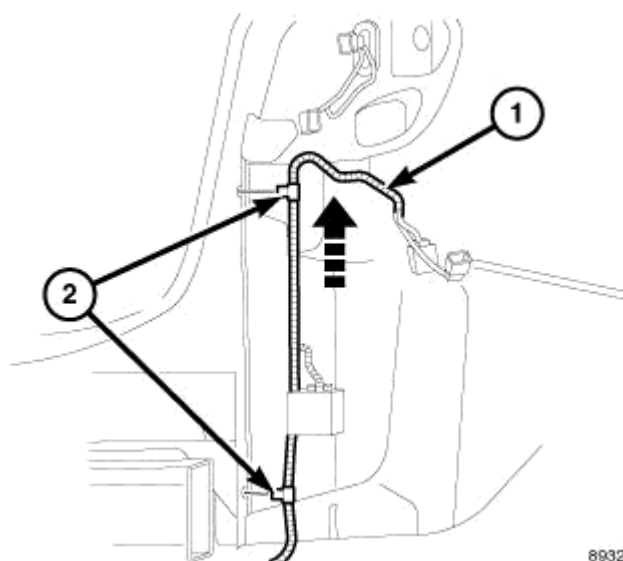


893204

Fig. 7: Harness & Right Tail Lamp
Courtesy of CHRYSLER LLC

7. Position the harness (1) up the right side of the vehicle to the right tail lamp opening and secure the clips


(2) to the body seem.

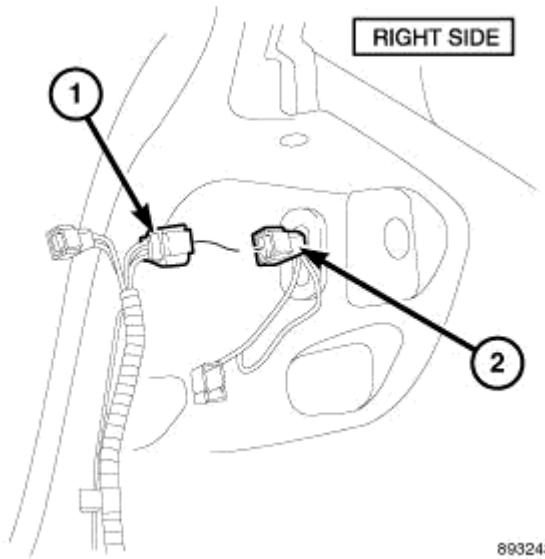

893243

Fig. 8: Right Side Tail Lamp Electrical Connectors
Courtesy of CHRYSLER LLC


8. Connect the harness (1) to the right side tail lamp electrical connectors (2).

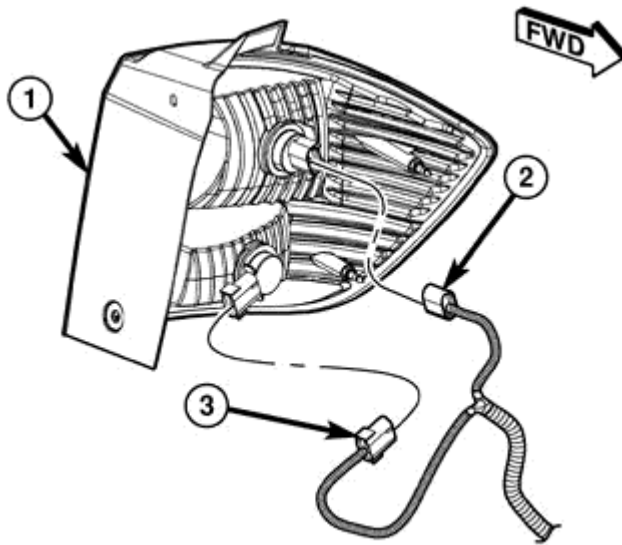

893122

Fig. 9: Tail Lamp Electrical Connectors & Tail Lamp Assemblies
Courtesy of CHRYSLER LLC

9. Connect the tail lamp electrical connectors (2 and 3) to the tail lamp assemblies (1).

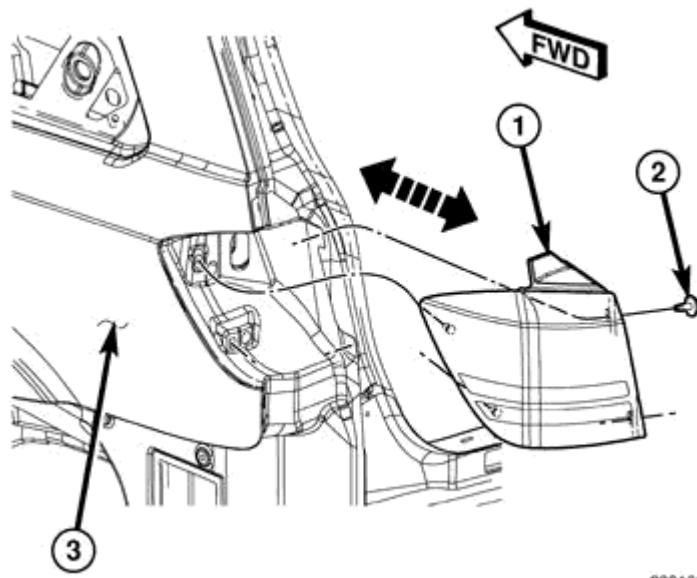

893102

Fig. 10: Push Pin Fasteners & Rear Tail Lamp Assemblies
Courtesy of CHRYSLER LLC

10. Install tail lamps assemblies (1) and install the push pin fasteners (2) fully.