

2009 ACCESSORIES AND EQUIPMENT

Overhead Console - Service Information - Journey

DESCRIPTION

DESCRIPTION

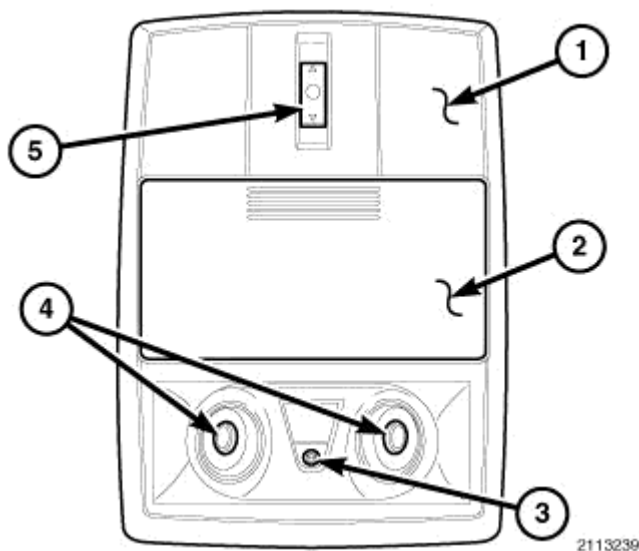


Fig. 1: Identifying Overhead Console Components
Courtesy of CHRYSLER LLC

There are two different style's of overhead console (1) available on this vehicle, High line and Mid or Low line. All overhead consoles are equipped with a sunglasses storage bin (2) and two reading and courtesy lamps (4). On High line models, the reading lamps are a Light Emitting Diode (LED) multi directional design, and on the Mid or Low line design the lamps are fixed with a replaceable incandescent bulb. The sunglasses storage bin also has a conversation mirror that is visible when the bin is locked in the partial open position. On vehicles equipped with a power sunroof, the sunroof switch (5) is located behind the sunglasses bin. On vehicles equipped with automatic climate control an infrared temperature sensor (3) is located between the reading and courtesy lamps. Both overhead console designs are mounted with six snap clips into a molded plastic retainer bracket located above the headliner to provide secure overhead console attachment.

REMOVAL

SUNGLASSES BIN

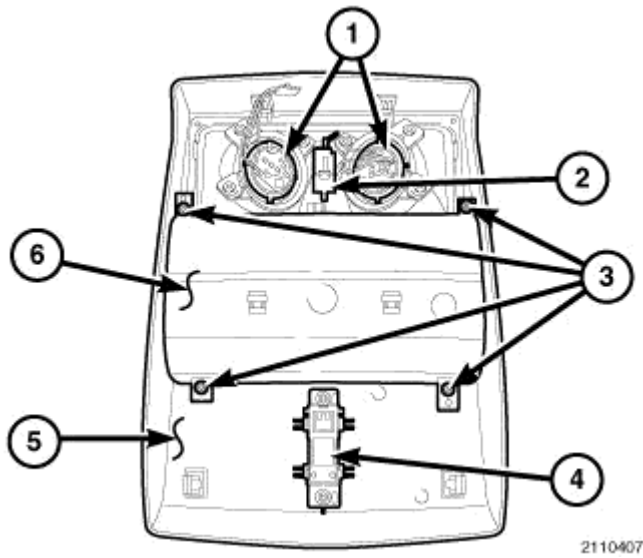


Fig. 2: Identifying Overhead Console Components
Courtesy of CHRYSLER LLC

1. Remove the overhead console (5). See **Removal** .
2. Remove the four fasteners (3) that secure the sunglasses bin (6) to the console.
3. Remove the bin from the console.

CONSOLE ASSEMBLY

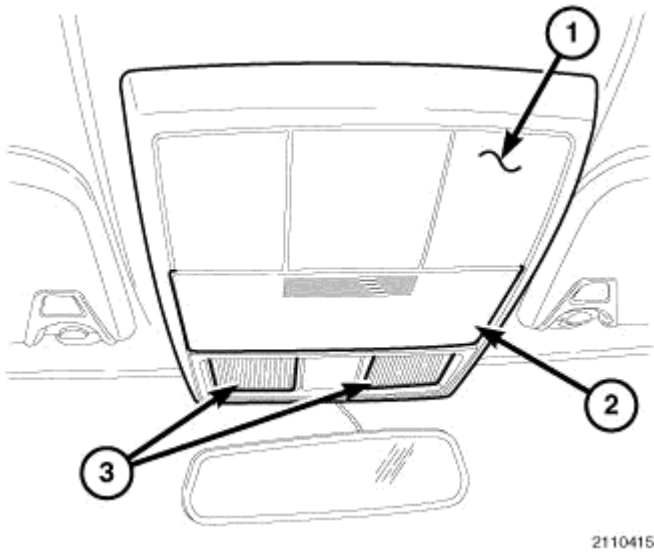


Fig. 3: Console Assembly
Courtesy of CHRYSLER LLC

1. Disconnect and isolate the battery negative cable.
2. Using your fingertips, grasp the sides of the overhead console (1) and pull straight down evenly to disengage the snap clips from the mounting bracket.

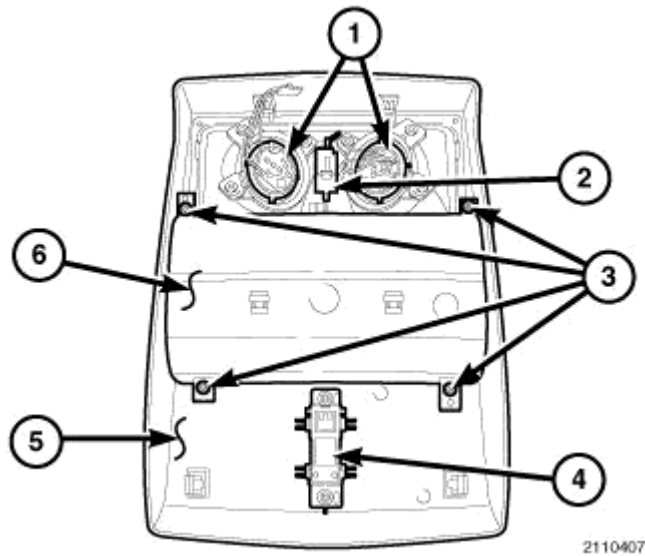


Fig. 4: Identifying Overhead Console Components

Courtesy of CHRYSLER LLC

3. Lower the overhead console (5) far enough to access the wire harness connectors.
4. If equipped, disconnect the courtesy lamps (1), infrared temperature sensor (2) and power sunroof switch (4) electrical connectors.
5. Remove the overhead console assembly from the vehicle.

INSTALLATION

SUNGLASSES BIN

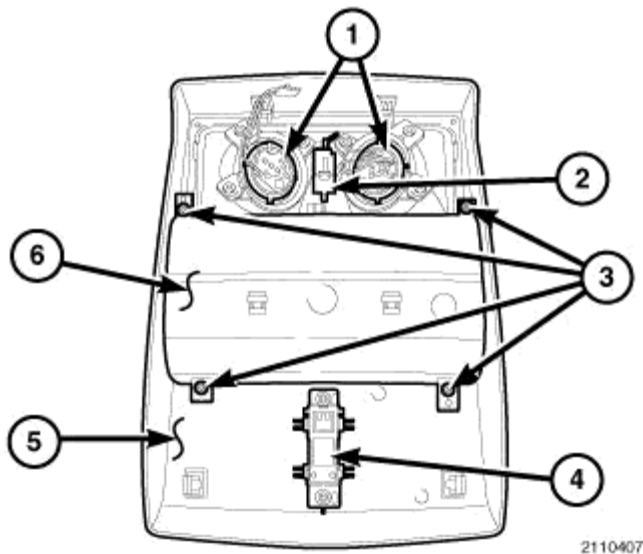


Fig. 5: Identifying Overhead Console Components

Courtesy of CHRYSLER LLC

1. Install the sunglasses bin (6) into the overhead console (5).
2. Install the four fasteners (3) that secure the bin to the console.
3. Install the overhead console. See **Installation** .

CONSOLE ASSEMBLY

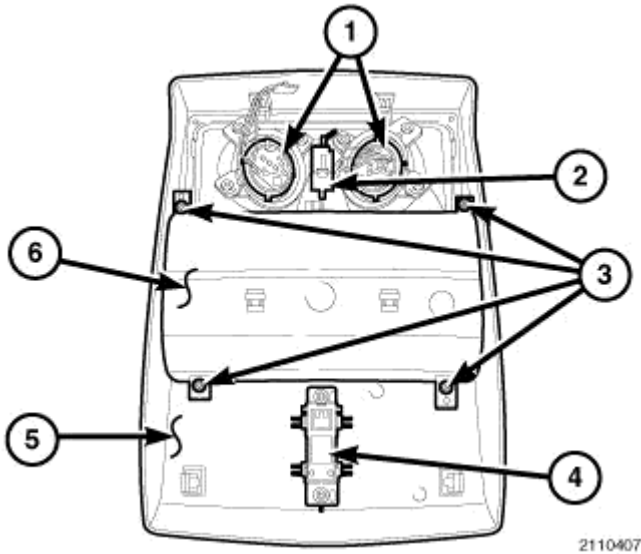


Fig. 6: Identifying Overhead Console Components
Courtesy of CHRYSLER LLC

1. Position the overhead console (5) in the vehicle near the headliner assembly.
2. If equipped, connect the courtesy lamps (1), infrared temperature sensor (2) and power sunroof switch (4) electrical connectors.
3. Position the overhead console so that the six retaining clips are lined up properly with the bracket.

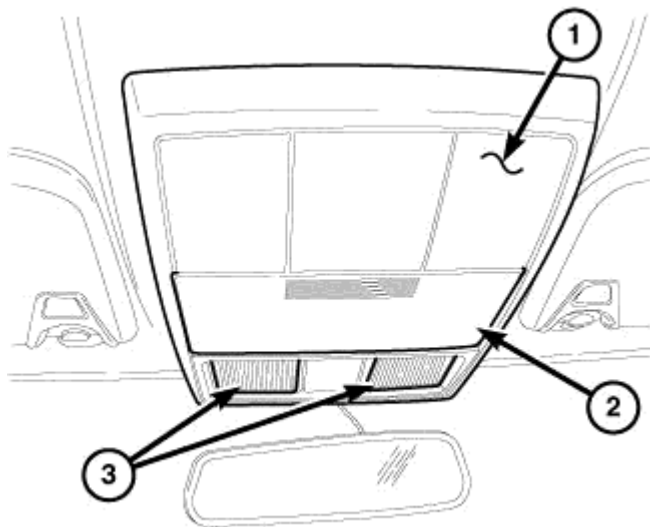


Fig. 7: Console Assembly

Courtesy of CHRYSLER LLC

4. Applying pressure to the overhead console (1), push straight up evenly to engage the snap clips into the mounting bracket.
5. Connect the battery negative cable.