

2009 ACCESSORIES AND EQUIPMENT

Speed Control - Service Information - Journey

SWITCH, SPEED CONTROL

REMOVAL

REMOVAL

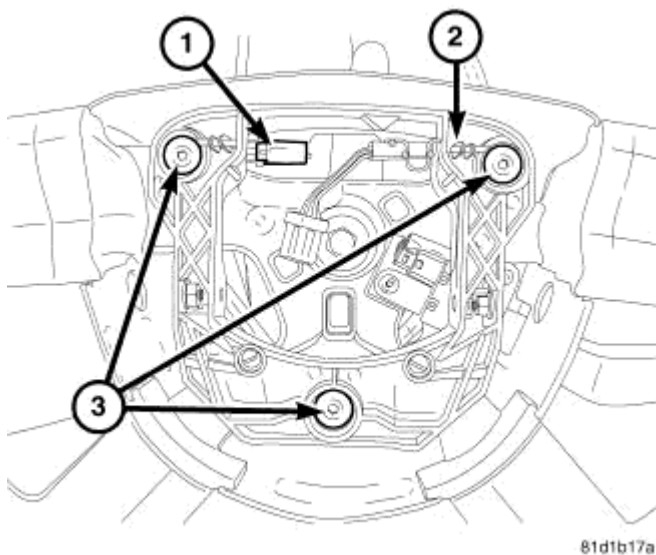


Fig. 1: Removing/Installing Horn Switch
Courtesy of CHRYSLER LLC

WARNING: Disconnect and isolate the battery negative (ground) cable before beginning steering wheel removal or installation. Allow the front airbag system capacitor to discharge for two minutes before removing the steering wheel or any front airbag system component. This will disable the front airbag system. Failure to disconnect the battery could result in accidental front airbag module deployment and possible personal injury. Do not place a non-deployed airbag face down on a hard surface as the airbag will propel into the air if accidentally deployed, and could result in serious or fatal injury.

1. Disconnect and isolate the negative battery cable before beginning steering wheel removal. Allow the front airbag system capacitor to discharge for two minutes before removing the steering wheel or any front airbag system component.
2. Turn off ignition.
3. Remove the driver's side airbag. Refer to **Restraints/AIR BAG, Driver - Removal**.
4. Disconnect electrical connector (1) from horn switch (2).
5. Remove mounting screws (3) and horn switch (2) from steering wheel.

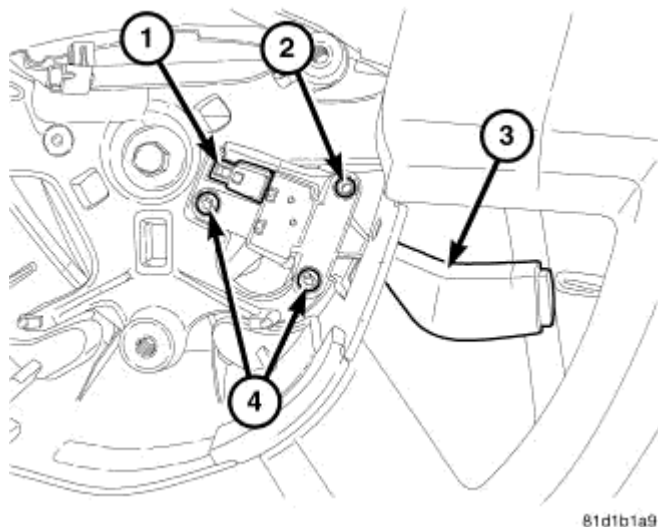


Fig. 2: Identifying Speed Control Switch Screws & Electrical Connector
Courtesy of CHRYSLER LLC

6. Disconnect electrical connector (1) from speed control switch (3).
7. Remove screws (4) from speed control switch (3).
8. Remove speed control switch (3) from steering wheel.

INSTALLATION

INSTALLATION

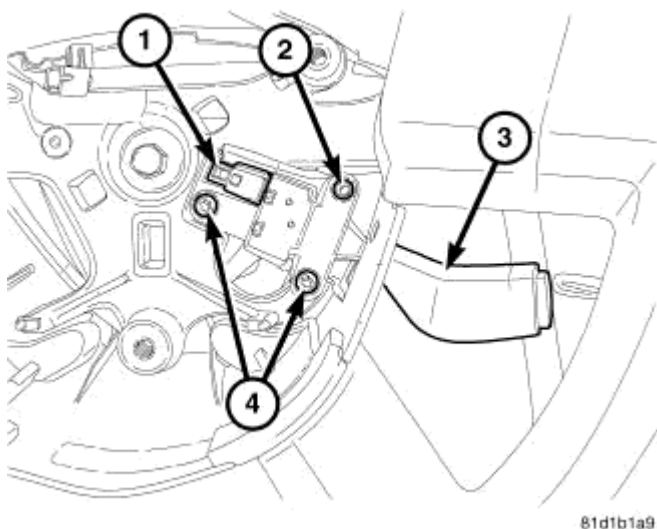


Fig. 3: Identifying Speed Control Switch Screws & Electrical Connector
Courtesy of CHRYSLER LLC

1. Install speed control switch (3) onto the locating pin (2) in the steering wheel.

2. Install speed control switch mounting screws (4) and tighten screws to 1.6 N.m (15 ins. lbs.).
3. Connect electrical connector (1) to speed control switch (3).

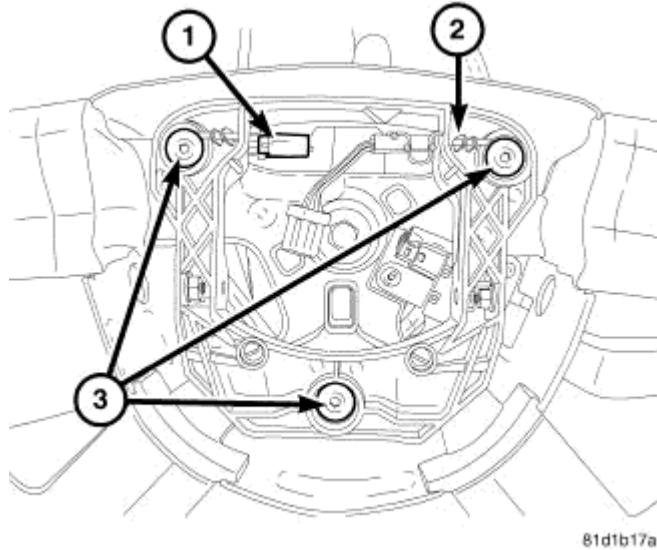


Fig. 4: Removing/Installing Horn Switch
 Courtesy of CHRYSLER LLC

4. Install horn switch (2) to steering wheel.
5. Install horn switch mounting screws (3) and tighten screws to 8 N.m (71 ins. lbs.).
6. Connect electrical connector to horn switch.
7. Install driver's side airbag. Refer to **Restraints/AIR BAG, Driver - Installation** .
8. Connect negative battery cable, tighten nut to 4.5 N.m (40 in. lbs.).
9. Verify vehicle and system operation.